


FACADE HL - Z-GIRT

OUTSIDE CORNER DETAIL

HORIZONTAL APPLICATION






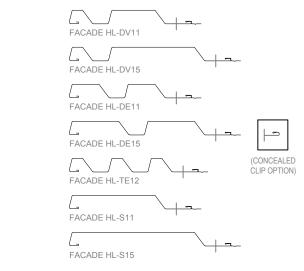

KEYNOTES:

- TRIM FASTENERS ARE SELF-DRILL PANCAKE HEAD AND MUST BE BE INSTALLED IN A STAGGERED PATTERN
- FASTENERS MUST PENETRATE STEEL SUBSTRATE BY 5/8" MINIMUM THREAD LENGTH

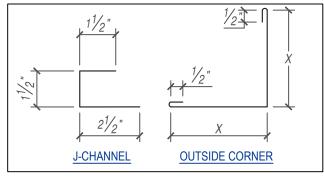

FLASHINGS

DISCLAIMER: DETAIL SHOWN FOR ILLUSTRATION PURPOSES ONLY, ACTUAL PROJECT DETAIL MAY VARY

POLYISO INSULATION AIR BARRIER (BY OTHERS) SHEATHING (BY OTHERS) METAL STUD (BY OTHERS) **Z-GIRT** #10 - 16 x 1" DP3 PHD (12"o.c.) 1/8" x 3/16" POP RIVET (12" o.c.) FACADE HL PANEL 18GA SUPPORT PLATE * (FASTENED @ EA. Z-GIRT) **OUTSIDE CORNER** J-CHANNEL - 1/8" x 3/16" POP RIVET (12" o.c.) - FACADE HL PANEL SCALE: 3" = 1'-0" ★ NOTE: MAY OMIT SUPPORT PLATE IF ATTACHING EFFECTIVE DATE: 01-01-2023 FLASHING TO STRUCTURAL MEMBER. SUBJECT TO CHANGE WITHOUT NOTICE

DREXEL METALS - DREXMET.COM